

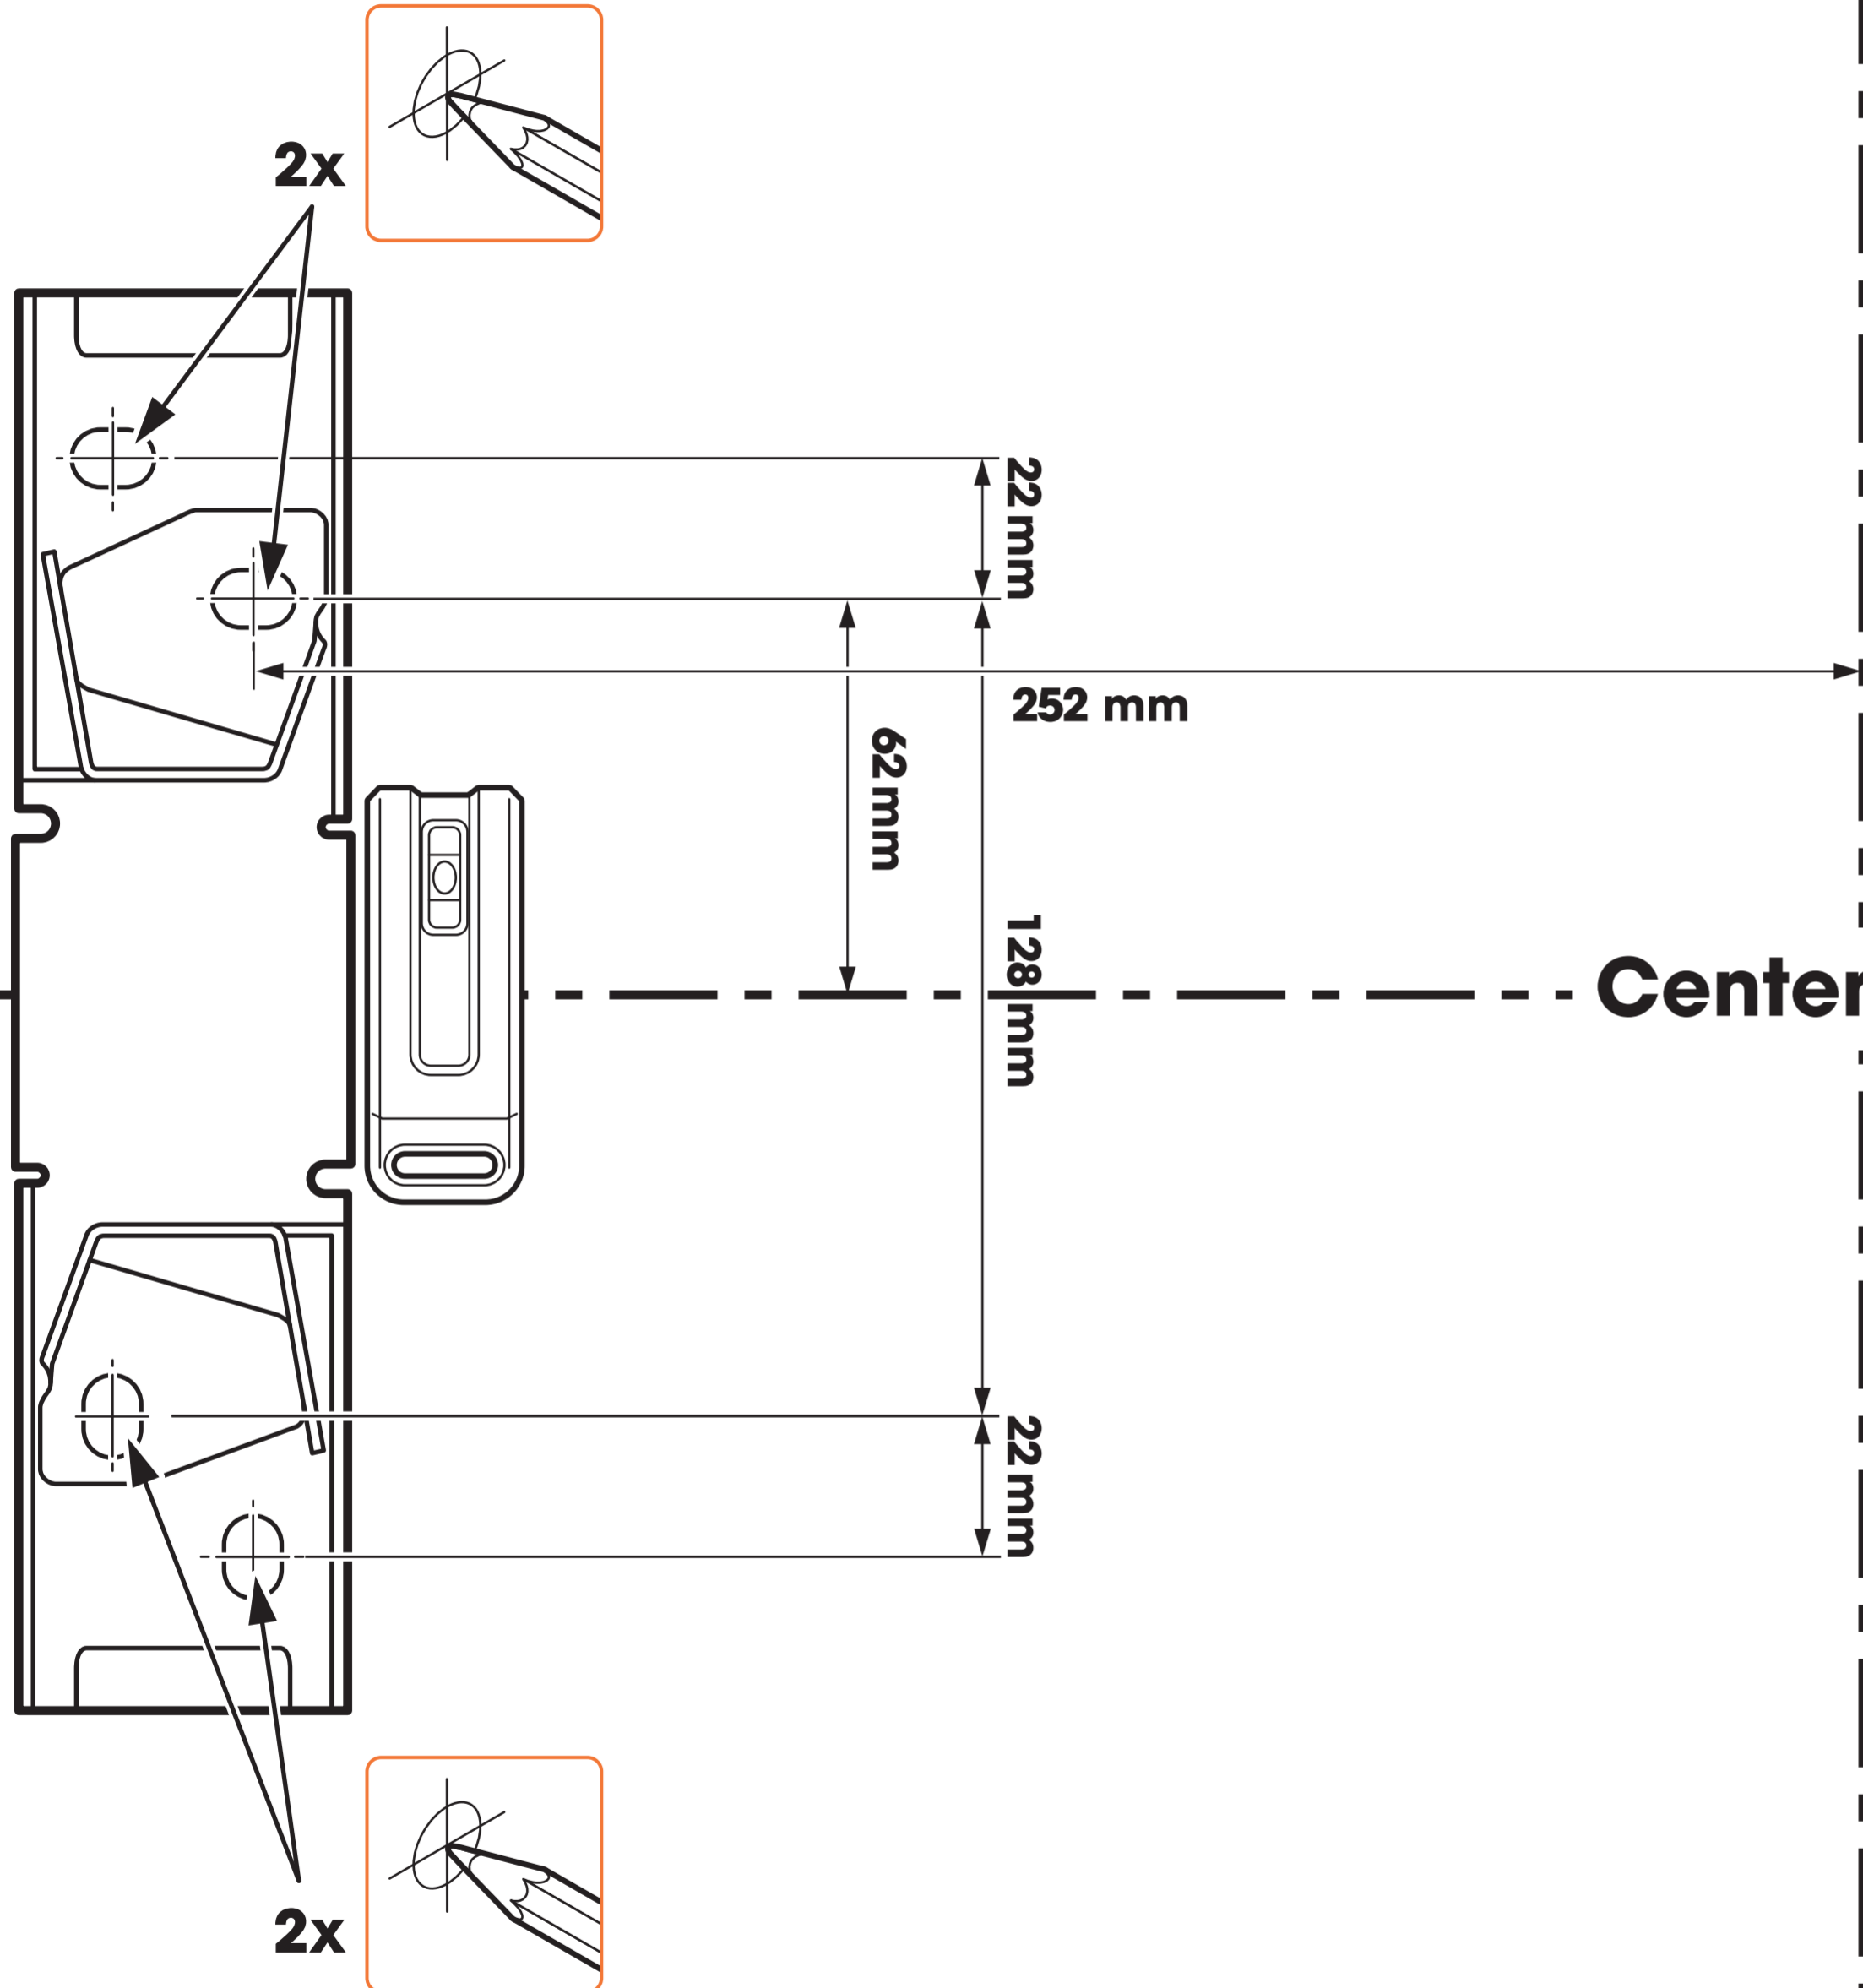


TOP

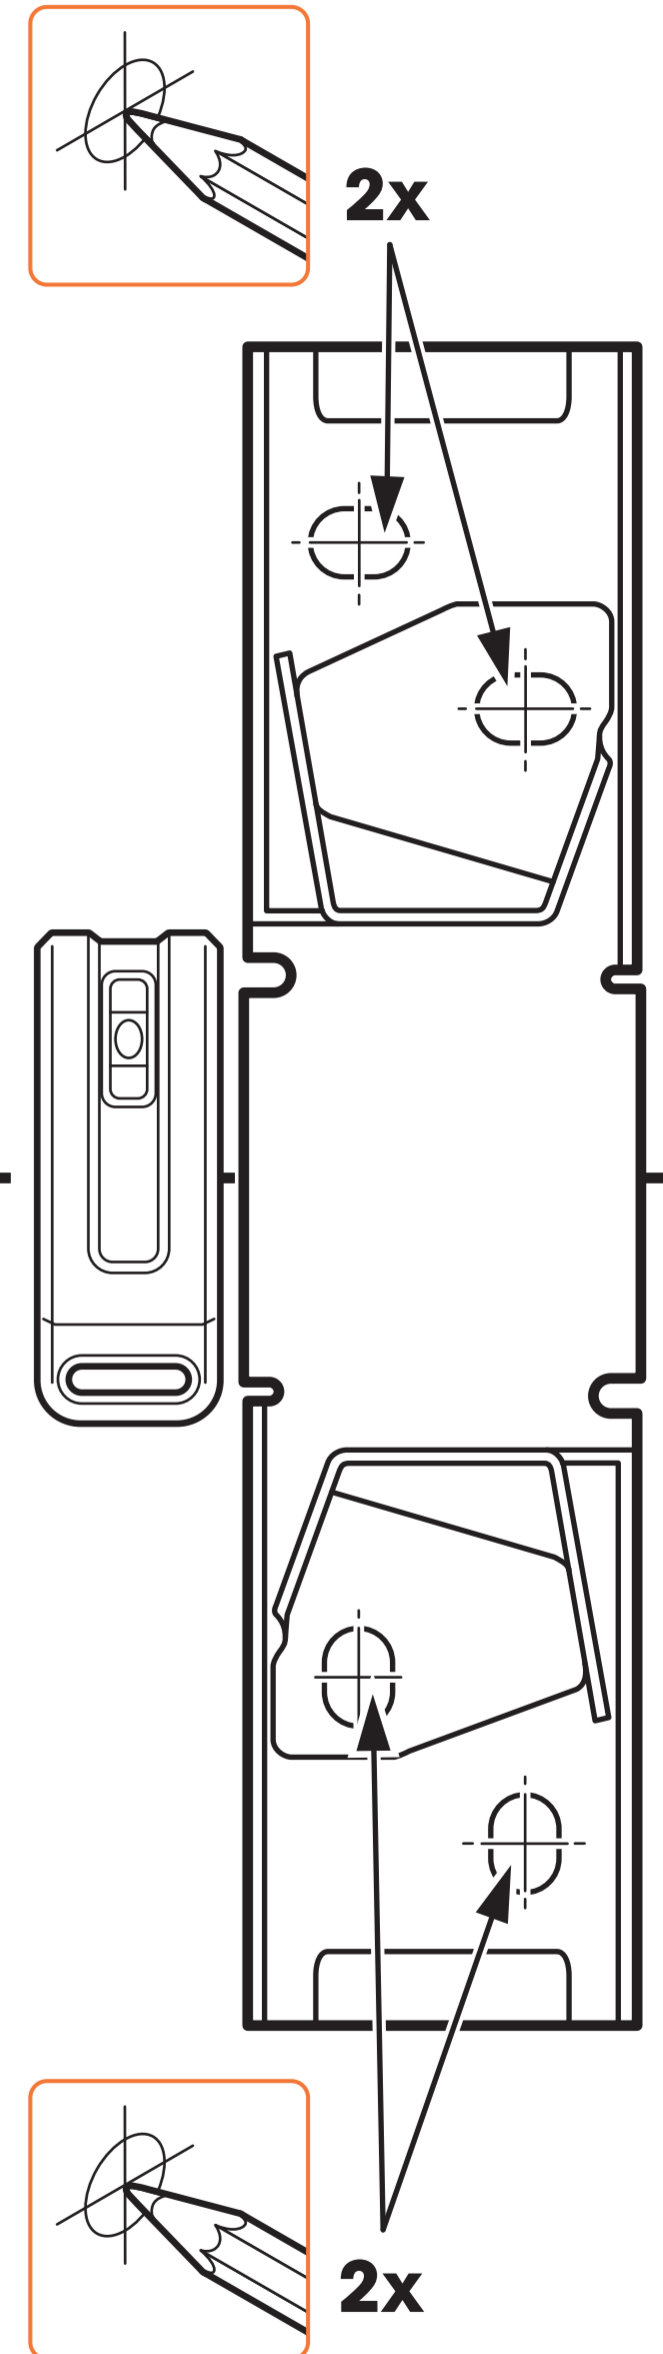

BE AWARE OF TV-SCREEN HEIGHT!
Read mounting instructions!

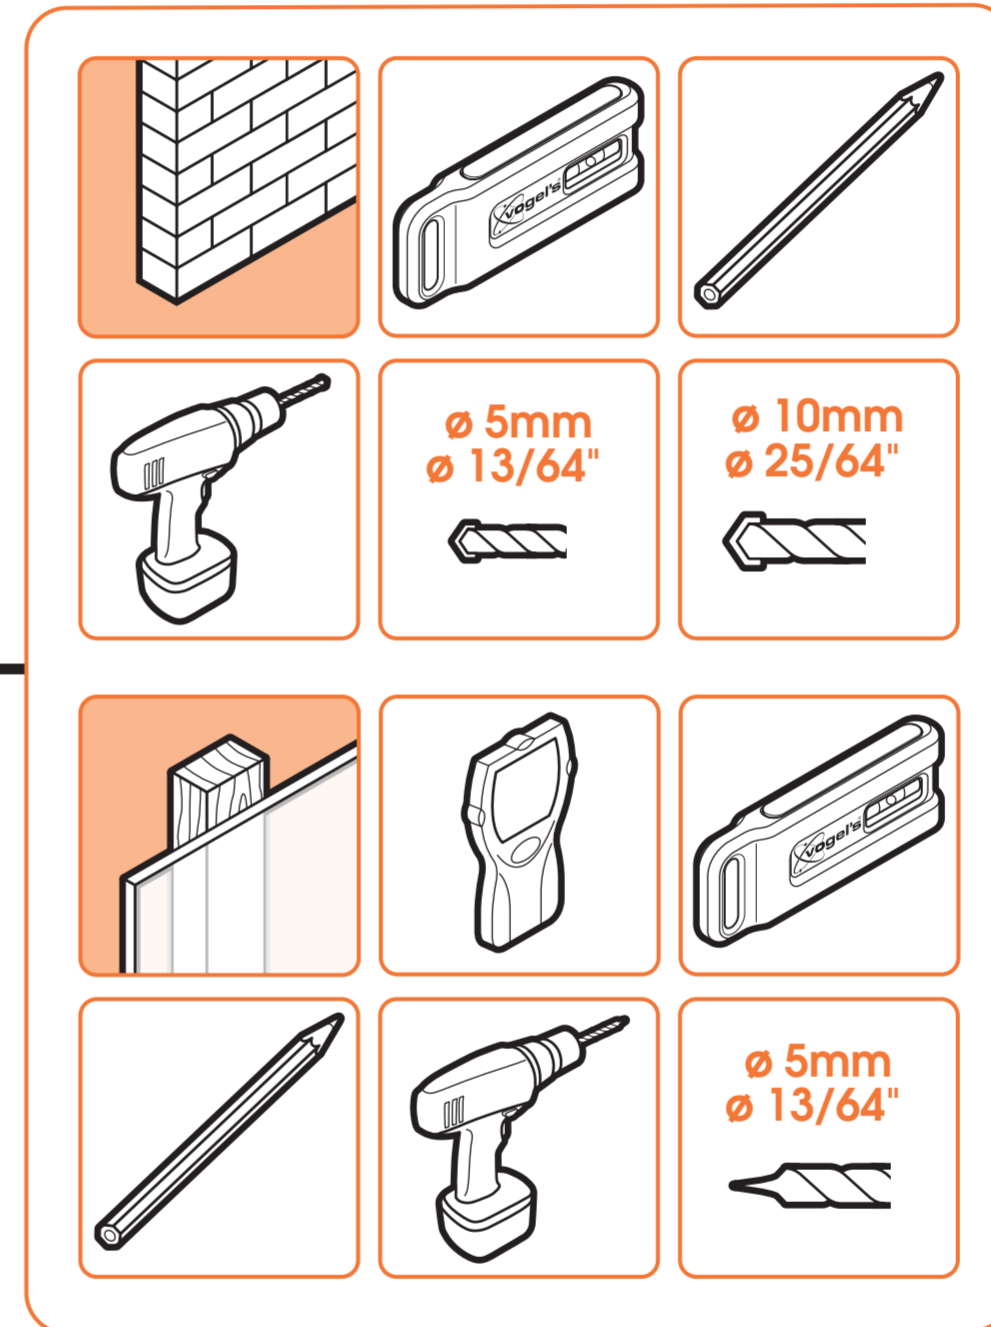

Centerline TV

BOTTOM



Template for drilling
THIN 425

Vogel's Holding BV 2016 © all rights reserved.